

ROOMETTES

OHIO SHIPPING #01-107-01 AND COMBO R4373

INSTRUCTIONS

1. REMOVE THE SHIPPING OFFICE FROM THE CARDBOARD SHEET WITH A SHARP HOBBY KNIFE. **DO NOT CUT THE DOTTED LINES!** THEY ARE FOR FOLDING.
2. CAREFULLY BEND THE WALLS, FLOOR AND CEILING INWARD TO CREATE A BOX. **DO NOT OVERBEND THEM!**
3. BEND AND GLUE THE LEFT AND RIGHT WING TABS UNDER THE FLOOR. USE A POPSICLE STICK OR SIMILAR TOOL TO CAREFULLY APPLY PRESSURE ON THE FLOOR OVER EACH WING TO SET THE GLUE.
4. FLIP THE ROOM OVER AND GLUE THE LEFT AND RIGHT WING TABS OVER THE TOP OF THE CEILING.
5. BEND THE TABS LABELLED "GLUE TO WALL" AT A RIGHT ANGLE INTO THE ROOM. SET THE ROOM ASIDE TO DRY.
6. ASSEMBLE THE CLOSET IN A SIMILAR MANNER, EXCEPT BEND THE "GLUE TO WALL" TABS OUT OF THE ROOM.
7. CAREFULLY BEND THE WAREHOUSE ROOM INTO A BOX. FASTEN THE LARGE "GLUE" TABS TO THE BACK WALL. GLUE THE CEILING TABS TO THE OUTSIDE OF THE WALLS. FINISH BY FASTENING THE SMALL "GLUE" TABS ON THE SHORT WALL AROUND THE FLOOR AND CEILING. BEND THE WALL-MOUNT TABS AS INSTRUCTED.
8. FOLD AND GLUE THE CARGO CRATES TO CREATE BOXES. A SMALL SCREWDRIIVER OR FILE CAN BE USED TO POSITION AND APPLY PRESSURE TO THE TABS INSIDE THE BOX AS THE GLUE SETS.
9. DETERMINE WHERE THE CRATES WILL BE POSITIONED IN THE WAREHOUSE. USE YOUR KNIFE TO ROUGHEN THE SURFACE OF THE FLOOR WHERE EACH CRATE WILL SIT FOR IMPROVED ADHESION. GLUE THE CRATES IN PLACE, BEING GENEROUS WITH ADHESIVE BEHIND THEM. **YOU DO NOT WANT THEM TO COME LOOSE LATER!**
10. CHECK ALL GLUE JOINTS TO MAKE SURE THEY ARE SOLID BEFORE PROCEEDING. TEST FIT THE ROOMS. IF YOU HAVE ASSEMBLED YOUR BUILDING ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS THEY SHOULD FIT EASILY. IF YOU FIND THEY FIT TOO TIGHT VERTICALLY YOU CAN REMOVE SOME OF THE WALL-MOUNT TAB MATERIAL WITH SCISSORS FOR ADDITIONAL CLEARANCE. TO PREVENT LIGHT LEAKAGE, SPREAD A BIT OF GLUE INTO THE PERFORATED SEAMS ON THE CORNERS OF THE ROOM FROM THE OUTSIDE. THIS WILL ALSO MAKE THE JOINTS STRONGER.
11. USE YOUR KNIFE TO REMOVE THE CEILING PLUGS AND INSTALL PROVIDED LEDS, FASTENING THEM IN PLACE WITH GOOD QUALITY TAPE OR GLUE.
12. GLUE THE ROOMS TO THE WALLS, BEING CAREFUL NOT TO GET GLUE ON YOUR CLEAR WINDOW MATERIAL.
13. PLUG THE LED HARNESS INTO YOUR WOODLAND SCENICS® JUST PLUG® OR NCE ILLUMINATOR MODULE. SIT BACK AND ENJOY YOUR EFFORTS!

THIS IS NOT A TOY.
NOT SUITABLE FOR CHILDREN
UNDER 14 YEARS OF AGE.

DPM® LANDMARK STRUCTURES® HO SCALE BUILDING KIT



FREIGHT DEPOT #10700

INSTRUCTIONS

Follow the enclosed HO scale General Instructions for #100 and #200 series kits. The General Instructions will refer to the drawings and instructions included with this kit. Read through all instructions before beginning construction on your kit.

Chimneys: Lightly sand bottom of Chimney (107-6) and glue to Roof after Roof installation.


Roof: To assemble Roof (107-5), see enclosed Roof Assembly Instructions.

ANWEISUNGEN

Folgen Sie der beigefügten allgemeinen Bauanweisungen für HO-Bausätze der Serie #100 sowie #200. Diese allgemeine Bauanweisungen bezieht sich sowohl auf die Montagezeichnung sowie auf die Montageanweisungen, die dem Bausatz beiliegt. Lesen Sie bitte sorgfältig alle zugehörigen Anweisungen vor dem Zusammenbau Ihres Bausatzes gut durch.

Schornstein: Glätten Sie leicht mit Schmiergelpapier die Unterseite des Schornsteins (107-6) und kleben Sie nach Einbau des Dachs den Schornstein darauf.

Dach: Zur Montage des Dach (107-5) siehe beiliegende Dach Montageanweisungen

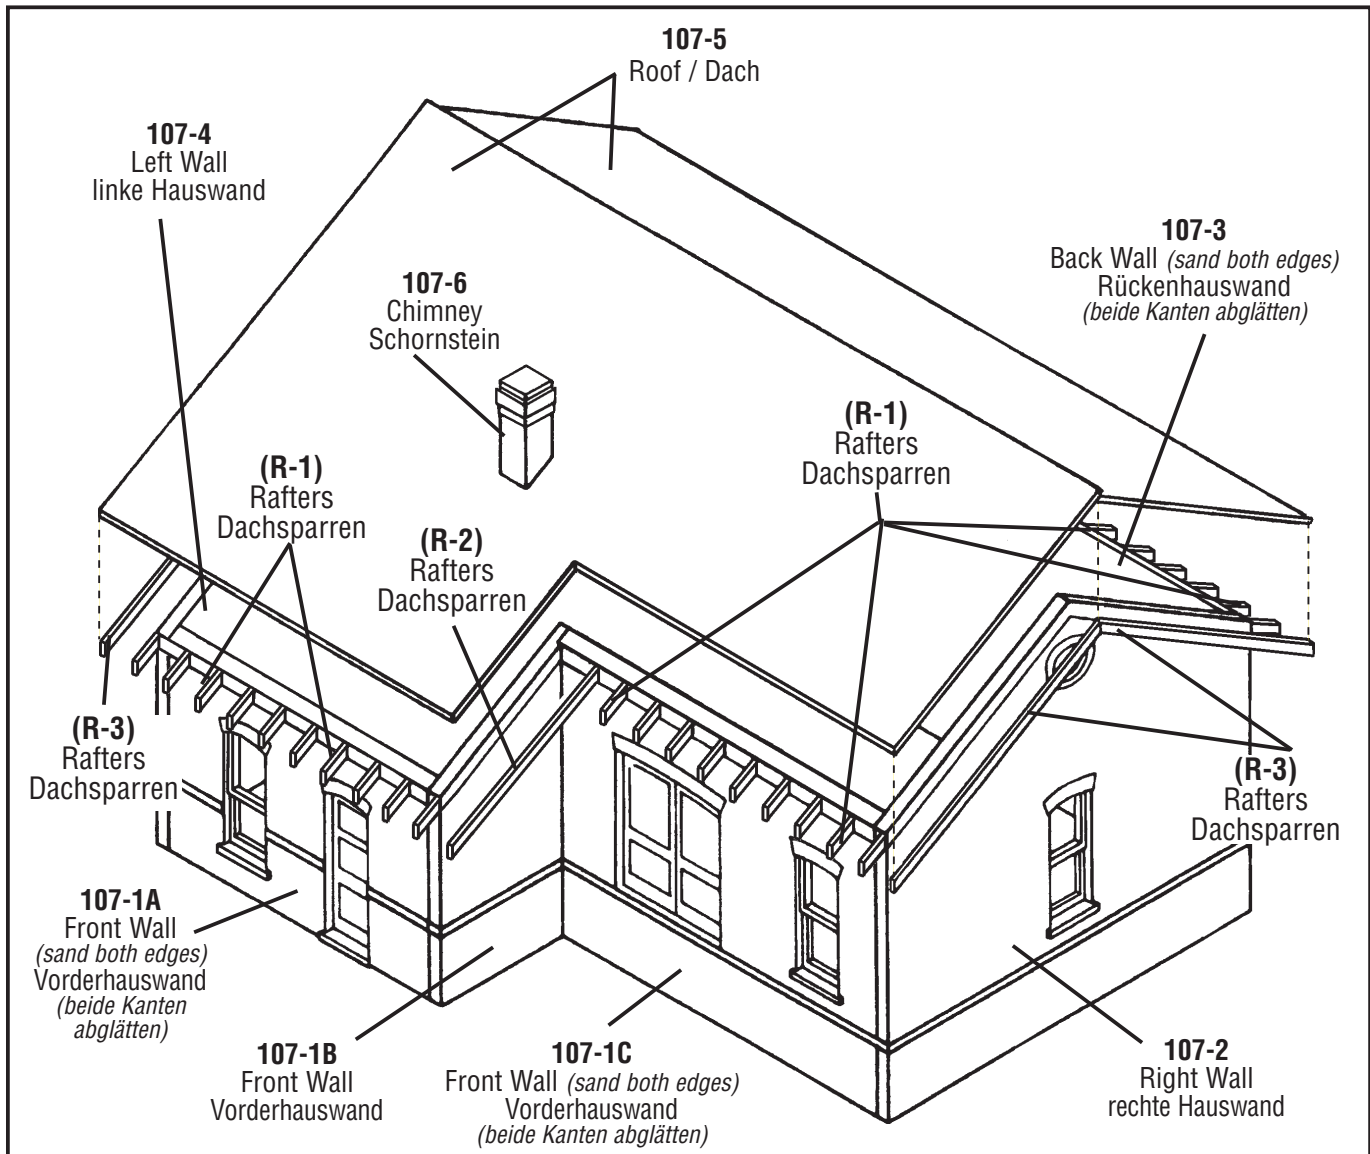

Create interest on your layout. Add lights to your buildings quickly and easily using the Woodland Scenics® Just Plug® Lighting System. Bereichern Sie Ihre Anlage: Mit dem Woodland Scenics Just Plug Beleuchtungssystem lassen sich Gebäude schnell und einfach beleben.

CAUTION: Cutting tools recommended. Use with care. / **ACHTUNG:** Schneidwerkzeuge empfohlen. Mit Vorsicht benutzen.

MODELING AND CARE INFORMATION This kit suggests the use of materials that may stain or cause damage. Take care to cover project area and clothing appropriately. Follow recommendations for use and cleanup.

Model making product. Not a toy! Not suitable for children under 14 years! / Produit pour le modélisme. Pas un jouet! Pas adapté aux enfants de moins de 14 ans! / Producto para modelismo. No es un juguete! No adecuado para niños menores de 14 años! / Modellbauartikel. Kein Spielzeug! Nicht geeignet für Kinder unter 14!

FREIGHT DEPOT ROOF ASSEMBLY #10700

Refer to full-sized Roof Templates A and B (Roof Templates show underside of roof).

1. Identify Roof Sections A and B. Mark and cut corner out of Section A as shown in Template A.
2. On underside of Section A, draw a line parallel with edge of styrene in the position shown on Template A to indicate ridge support position. Locate position precisely.
3. Rafterers are the wood frames that support the roof in a prototype structure. Rafter locations are shown on Roof Templates A and B. Pencil in the position of Rafterers on undersides of both Roof Sections, as shown on the Roof Templates (Rafterers are designated R-1 through R-4). Rafterers will be cut and glued in place later, after the Roof Sections are glued in place.
4. From styrene strip, cut Ridge Support the length indicated on Template A and glue in place on inside edge of line you have drawn on underside of this Roof Section. Allow to dry completely.
5. As shown in Fig. 1, turn assembled building upside down and sand top edges on both slopes.
6. As shown in Fig. 2, lay building on Roof Section A, aligning roof peaks with the line you have drawn. Allow an equal overhang on both ends. Glue Roof Section A to building and allow to dry.
7. Keep building upside down. Slide Roof Section B into place, aligning ends and abutting peak against Ridge Support attached to Roof Section A. From the underside, glue seam and glue roof to building sides. Allow to dry thoroughly.
8. Turn completed building right-side up and file overlap on ridge until even (Fig. 3).
9. Cut Rafterers from .02" x .08" strip styrene, using Rafter Templates R-1, R-2, R-3 and R-4. Before cutting, be sure they fit your model. End Rafterers should be set in about 1/64" from roof edges.
10. Glue Rafterers in place on penciled lines.

Return to #10700 Assembly Instruction Sheet to continue assembling building.

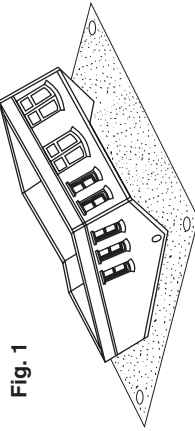


Fig. 1

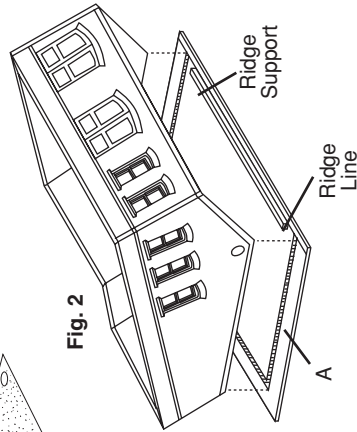


Fig. 2


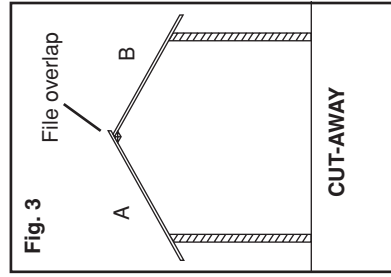


Fig. 3

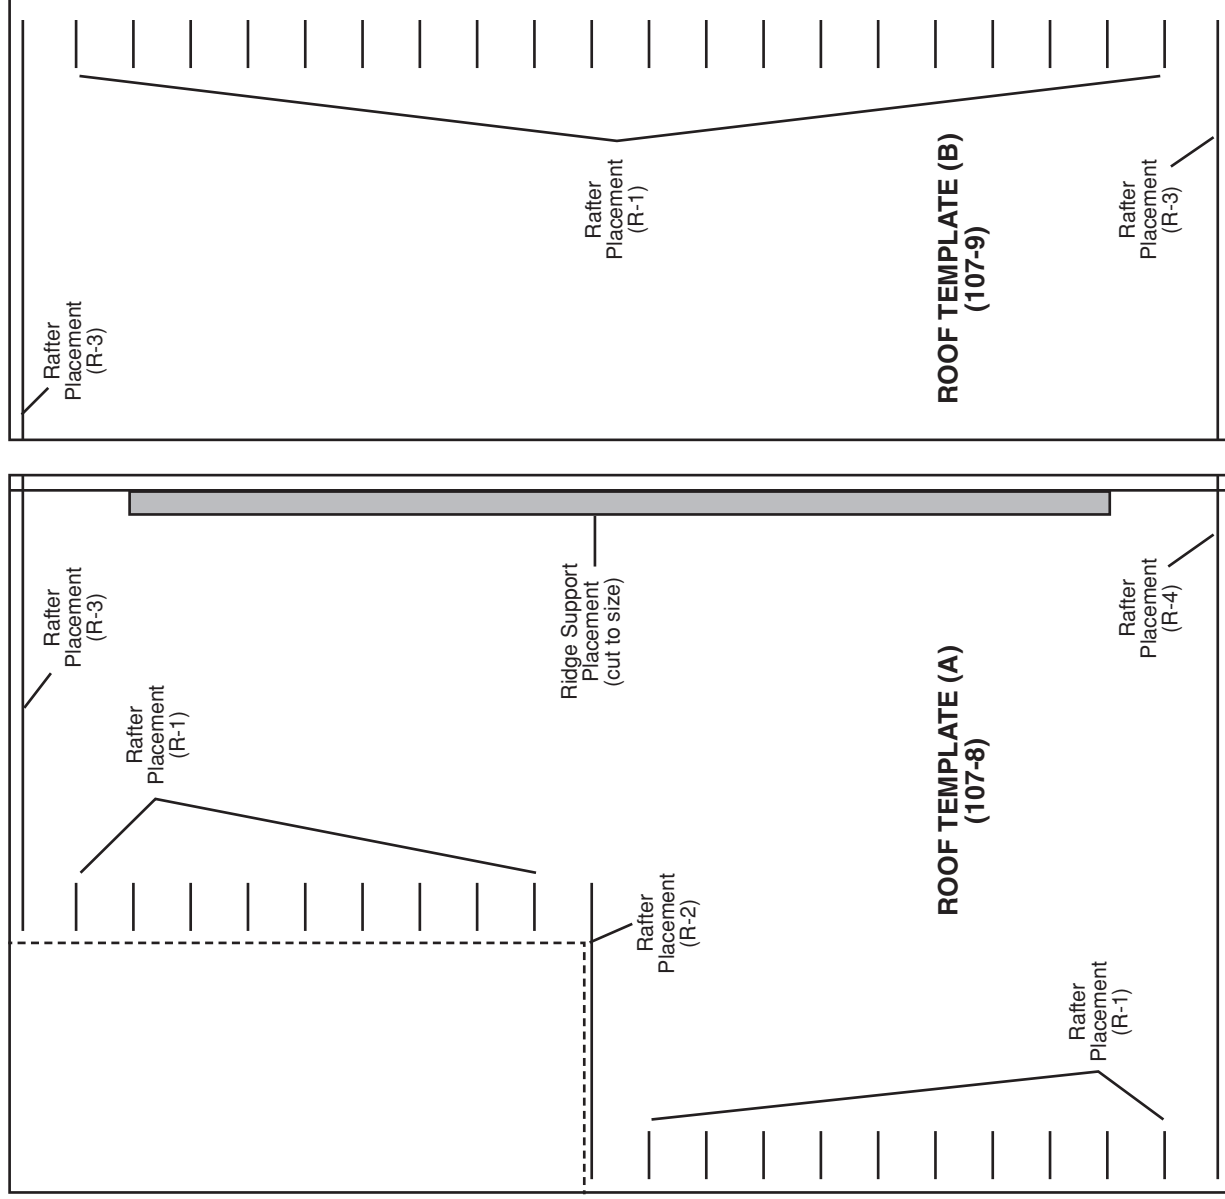

Draw Ridge Line on Roof Section

RAFTER TEMPLATES

Note: Templates are approximate sizes. Check fit before cutting.



R-3 (Make 3)



R-4 (Make 1)



R-2 (Make 1)



R-1 (Make 39)

CAUTION: Cutting tools recommended. Use with care.